

COFFEE USE AND CARE INSTRUCTIONS

TO USE:

1. Disassemble and hand wash all parts in soapy water, rinsing thoroughly before use. Dry completely before reassembling.
2. For best results, preheat by filling with boiling water or pre-cool by filling with cold water or ice. Empty after 2 minutes and fill the base. (not required for the Glass Barista Buddy)
3. Fill at arm's length to prevent accidental scalding - do not fill past measurement lines.
4. Place lid in open position before attaching to base. (not relevant for the Glass Barista Buddy)
5. Check seals are in place and lid is firmly attached.
6. Ensure lid is in closed position when travelling. (not relevant for the Glass Barista Buddy).
7. Clean thoroughly after each use.



CAUTION:

- If filling with boiling liquid, allow to cool with lid removed for at least 3 minutes before sealing.
- Keep out of reach of children & be cautious while using this product with hot contents.
- Check temperature of contents prior to consuming.
- Do not overfill.
- Juice, dairy or other liquids that spoil easily should not be kept in product for prolonged periods. Juice can ferment within a day, causing the lid to pop open, leading to injury or spills. (not relevant for the Glass Barista Buddy)
- Hot contents can create internal pressure. Keep lid in open position for liquid above 75°C. Open lid away from face. (not relevant for the Glass Barista Buddy)
- Keeps liquids very hot, allow to cool to drinking temperature before closing lid.
- If your Smoothie/Coffee product comes with a straw, remove straw when using with hot liquids.

CARE:

- All Bases are hand wash only (except for the Glass Barista Buddy which is top rack dishwasher safe).
- All Lids are top rack dishwasher safe (except for the 360 lid which is hand wash only).
- Do not use in the microwave (except the Glass Barista buddy which can be put in the microwave with the lid removed)
- Do not use for carbonated drinks or dry ice.
- Do not use in oven or freezer.
- Do not use abrasive cleaners containing bleach chlorine or other abrasives and harsh chemicals on any part of the cup.
- Take care using metal straws or spoons if your cup has a ceramic lining, as it may scratch.

COFFEE USE AND CARE INSTRUCTIONS




SLIDE LID:

To Disassemble:

1. Move slider to open position.
2. Lift from front of slider.
3. Wash

To Reassemble:

1. Insert slider into open position
- Note: Slider cannot be removed or assembled in closed position.

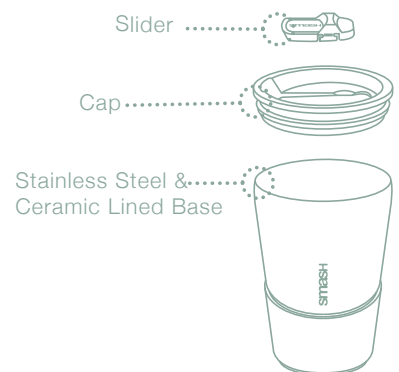


360 LID:

To Disassemble:

1. Unscrew lid from base
2. Click lid into open position
3. Rotate the silver top disc anticlockwise to unscrew

To Reassemble:

1. Align disc in the centre of the lid and rotate clockwise until tight
2. Click the disc to open and close.

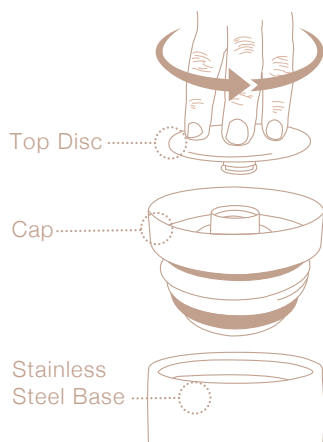

TWIST LOCK LID:

To Disassemble:

1. Remove cap from stainless steel base.
2. Ensure Top Disc is in open position.
3. Place the lid on a flat surface and firmly push down until Top Disc is dislocated.
4. Separate the 3 part lid system.

To Reassemble:

1. Clip Top Disc into place. (align the arrows)
2. Ensure Top Disc is in open position.
3. Screw in Bottom Disc.

