SMASH®

INSULATED LUNCH BAG USE AND CARE INSTRUCTIONS















TO USE:

- 1. Remove all packaging/sticker labels.
- 2. Wipe down the inner lining with warm soapy water and a soft cloth allow to air dry before sealing.
- 3. Use storage containers or sealed bags within the lunch bag.
- 4. Wipe the inner lining with warm soapy water between uses, spot clean the outer material as required and allow to air dry before sealing or storing.



CARE:

- Do not use abrasive cleaners containing bleach chlorine or other abrasives and harsh chemicals.
- Do not immerse in water, as the insulating materials will absorb water and can be difficult to dry out.
- Empty contents of the lunch bag after use to prevent odours and stains.
- Do not use in the microwave, washing machine, dishwasher or dryer.