

PLASTIC CONTAINER USE AND CARE INSTRUCTIONS



TO USE:

1. Remove all packaging/sticker labels and hand wash in soapy water, rinsing thoroughly before use and allow to air dry.
2. To achieve the best seal on the leak proof products, close the lid and then press down near the valve to expel air prior to clipping the lid closed.
3. Clean thoroughly after each use.



CAUTION:

- Leave lid open when microwaving to avoid dangerous steam build up.
- Be cautious when handling the container with hot contents or after reheating in the microwave.
- Do not use in a conventional oven, on a hot plate, under the grill, on the stove top or in the microwave using convection settings.

CARE:

- Top rack dishwasher safe.
- Dry all parts thoroughly after washing and store with lid open.
- Do not use in oven.
- Freezer safe - be aware that when frozen, plastic can become brittle (particularly the clips), so we recommend to rest for a few minutes at room temperature or run under warm water before attempting to open.
- Microwave safe - microwave at 1000W max in increments of 1 minute at a time with lid open.
- Do not use abrasive cleaners containing bleach chlorine or other abrasives and harsh chemicals.

