

STAINLESS STEEL LUNCH USE AND CARE INSTRUCTIONS

TO USE:

1. Separate all parts and hand wash in soapy water, rinsing thoroughly before use. Dry completely before reassembling.
2. For best leak proof seal, close the lid leaving the clips open and then apply pressure to the centre of the lid to expel air. Finally lock the clips in place.
3. Always check that the seals are in place and the lid is secured properly to prevent spills during transportation.
4. For microwave safe stainless steel products, please follow these guidelines:
 - Before microwaving, remove the lid and rest on top of the container (or remove completely).
 - Reheat in a max of 1 minute increments at max of 1000W.

***PLEASE NOTE THE SS 2 COMP BENTO SNACK (WHEN DIVIDER IS IN PLACE) AND THE SS 5 COMP BENTO ARE NOT MICROWAVE SAFE.**
5. Clean thoroughly after each use - all stainless steel lunch products on this page are top rack dishwasher safe (excluding the Double Wall Stainless Steel bowl 600/750ml, as this is hand wash only).

CAUTION:

- Do not microwave an empty stainless steel container.
- Always use gloves when removing hot container from a microwave.
- Keep out of reach of children & be cautious while using this product with hot contents.
- Check temperature of contents prior to consuming or serving.
- Do not overfill.
- Do not use in combination microwave ovens unless in microwave only mode.



CARE:

- All stainless steel lunch products on this page are top rack dishwasher safe (excluding the Double Wall Stainless Steel bowl 600/750ml, as this is hand wash only) - however we still recommend hand wash to extend the life of the product.
- Dry all parts thoroughly after washing and store with lid off.
- Do not use in conventional ovens, toaster ovens, hot plates or stove tops.
- Do not use abrasive cleaners containing bleach chlorine or other abrasives and harsh chemicals on any part of the container.
- Take care using metal cutlery on ceramic lining as it may scratch.